## FLOW HEATING UNIT CARE INSTRUCTIONS

## USE

- Not intended for cooking use
- Do not put food directly on the dekton top
- When storing products avoid areas with high humidity and temperatures
- Risk of burns: Allow unit to cool completely before moving or touching
- Risk of fire: Allow unit to completely cool before storage
- Follow health & safety, and food safety & hygiene guidelines

## CLEANING

- Disconnect from Mains before cleaning
- Clean Oak/Walnut sides using non-scouring sponge with a small amount of detergent and water
- Please make sure water is kept away from electrics. If water is to enter the unit please make sure unit is completely dry before being plugged back in
- Remove detergent with a damp rag
- Wipe down with a cloth and allow to air dry
- DO NOT use in the dishwasher
- DO NOT use abrasive cleaning products or cloths as the material will scratch

